
PRODUCT DATA SHEET FUEL WATER SEPARATOR BULK ASSEMBLY

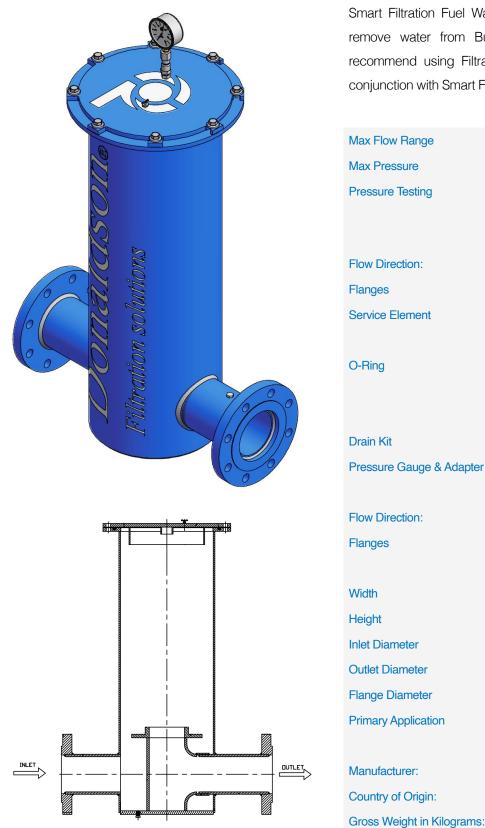

MART TRATION)IUTIONS® Smart Filtration Fuel Water Separator Bulk Assembly is designed to remove water from Bulk Fuel Applications. For best results, we recommend using Filtration Fuel Water Separator Bulk Assembly in conjunction with Smart Filtration ST Manifolds.

Pressure Gauge & Adapter

158.50 gpm / 600 lpm 4 Bar Assembly Undergoes Pressure Test of 600kPa / 6 Bar Max at Factory

Out-In 100NB ASA 150 Water Separator Element via Coalescence ID=290MM X 7MM-70 SHORE O-Ring To Be Replaced Every Third Filter Change Included Included (1 Each)

Outside to In Flow 100NB ASA 150

600 mm (23.62 inch) 825 mm (32.48 inch) 100 mm (3.94 inch) 100 mm (3.94 inch) 228.6 mm (9.00 inch) **Bulk Fuel**

Donaldson Company, Inc. South Africa 60

Smart Filtration Solutions 7900 International Drive Suite 300, Bloomington, MN 55425, USA Phone: +1(952) 679-7741

Smart Filtration Solutions P.O.Box 430479 Dubai, UAE DMCC Business Centre Phone: +971 4 3201744

Smart Filtration Solutions P.O.Box 430479 Dubai, UAE Ras Al Khor Ind. Area # 2 Phone: +971 4 3201744

Understanding Liquid Filter Efficiency


This information is provided as an aid to understanding filter efficiency terminology based on current ISO, ANSI and NFPA test standards.


What Is a Beta Ratio?

Beta ratio (symbolized by β) is a formula used to calculate the filtration efficiency of a particular fluid filter using base data obtained from multipass testing.

In a multi-pass test, fluid is continuously injected with a uniform amount of contaminant (i.e., ISO medium test dust) then pumped through the filter unit being tested. Filter efficiency is determined by monitoring fluid contamination levels upstream and downstream of the test filter at specific times. An automatic particle counter is used to determine the contamination level. Through this process an upstream to downstream particle count ratio is developed, known as the beta ratio.

The formula used to calculate the beta ratio is:



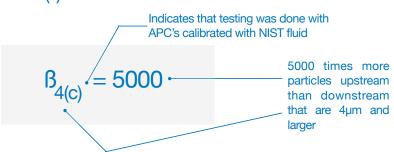

What is Efficiency?

The beta ratio is commonly used to calculate the filtration efficiency of a filter and can be converted into a percentage of efficiency at a given particle size.

The formula used to calculate efficiency is:

Efficiency_(x) = $\frac{\beta - 1}{\beta}$

where (x) is a given particle size

$\beta_{4(c)}$ = 5000 is same as 99.98% @ 4µm

B5000 is 99.98% for particles 4µm and greater



Smart Filtration Solutions 7900 International Drive Suite 300, Bloomington, MN 55425, USA Phone: +1(952) 679-7741 Smart Filtration Solutions P.O.Box 430479 Dubai, UAE DMCC Business Centre Phone: +971 4 3201744 Smart Filtration Solutions P.O.Box 430479 Dubai, UAE Ras Al Khor Ind. Area # 2 Phone: +971 4 3201744

How Big is a Micron?

Compare a micron size to these familiar particles.

Grain of table salt	100µm
Human hair	80µm
Lower limit of visibility	40µm
White blood cell	25µm
Talcum powder	10µm
Red blood cell	8µm
Bacteria	2µm
Silt	<5µm
Talcum powder Red blood cell Bacteria	- 10μm 8μm 2μm

Beta Ratio

(at given particle size)

Efficiency

(at the same particle size)

1.01	1.00%
1.1	9.10%
1.5	33.30%
2 (Nominal)	50.00%
5	80.00%
10	90.00%
20	95.00%
75 (Absolute)	98.70%
100	99.00%
200	99.50%
1000	99.90%
2000	99.95%
5000	99.98%

- Without Beta Ratio / Efficiency information, Micron rating alone is meaningless.
- Focus must be on Beta Ratio, rather than just Efficiency %, as we can see above, 98.70% & 99.98% might not sound too big of a difference but in Filtration World, that's a huge difference.